

|                |            |   |    |            |    | M8                  |
|----------------|------------|---|----|------------|----|---------------------|
| 900 × 2000 mm  | 30 × 30 mm | 1 | 26 | ×26<br>×13 | 7  | M8-15×28<br>M8-45×3 |
| 1200 × 2000 mm | 30 × 30 mm | 1 | 26 | ×26<br>×13 | 9  | M8-15×28<br>M8-45×5 |
| 1600 × 2000 mm | 30 × 30 mm | 2 | 39 | ×26<br>×26 | 10 | M8-15×32<br>M8-45×6 |
| 1800 × 2000 mm | 30 × 30 mm | 2 | 39 | ×26<br>×26 | 10 | M8-15×32<br>M8-45×6 |
| 2000 × 2000 mm | 30 × 30 mm | 2 | 39 | ×26<br>×26 | 10 | M8-15×32<br>M8-45×6 |

50 mm

10 mm

|    |    |       |    |       |  |   |   |
|----|----|-------|----|-------|--|---|---|
| 1. | 2  | 2     | 2  |       |  |   |   |
| 2. | 4  |       | 4  |       |  |   |   |
| 3. | 39 |       |    |       |  |   |   |
| 4. | 26 |       | 26 |       |  |   |   |
| 5. | 32 | M8-15 | 6  | M8-45 |  | 4 | 8 |
| 6. | 4  |       | 6  |       |  |   |   |
| 7. | 1  |       |    |       |  |   |   |

- 1.
- 2.
- 3.
- 4.
- 5.

- 1.
2. 4
- 3.

1. 900/1200 mm      1      1600/1800/2000 mm      2

2.

3.      2    M8-15

## KD

- 1. 1
- 2. 4 M8-15
- 3.

4—

1600/1800/2000 mm

- 1.
- 2.
- 3.
- 4.
- 5.

900/1200 mm

5—

- |    |   |                |   |   |         |
|----|---|----------------|---|---|---------|
| 1. | 4 | 2 M8-15        | 2 |   |         |
| 2. |   | 1800 × 2000 mm | 2 | 1 | 1 M8-45 |
| 3. |   |                |   |   |         |
| 4. |   |                |   |   |         |



- 
- 4
- 
- 
- 




- 1.
- 2.
- 3.
- 4.
- 5.




# STEP 1


先组装框架，请使用 M8-15 螺丝  
完成角码连接和中管连接  
Assemble the frame first. Use M8-15 screws for  
connections of corner brackets and for  
connections of center tubes.

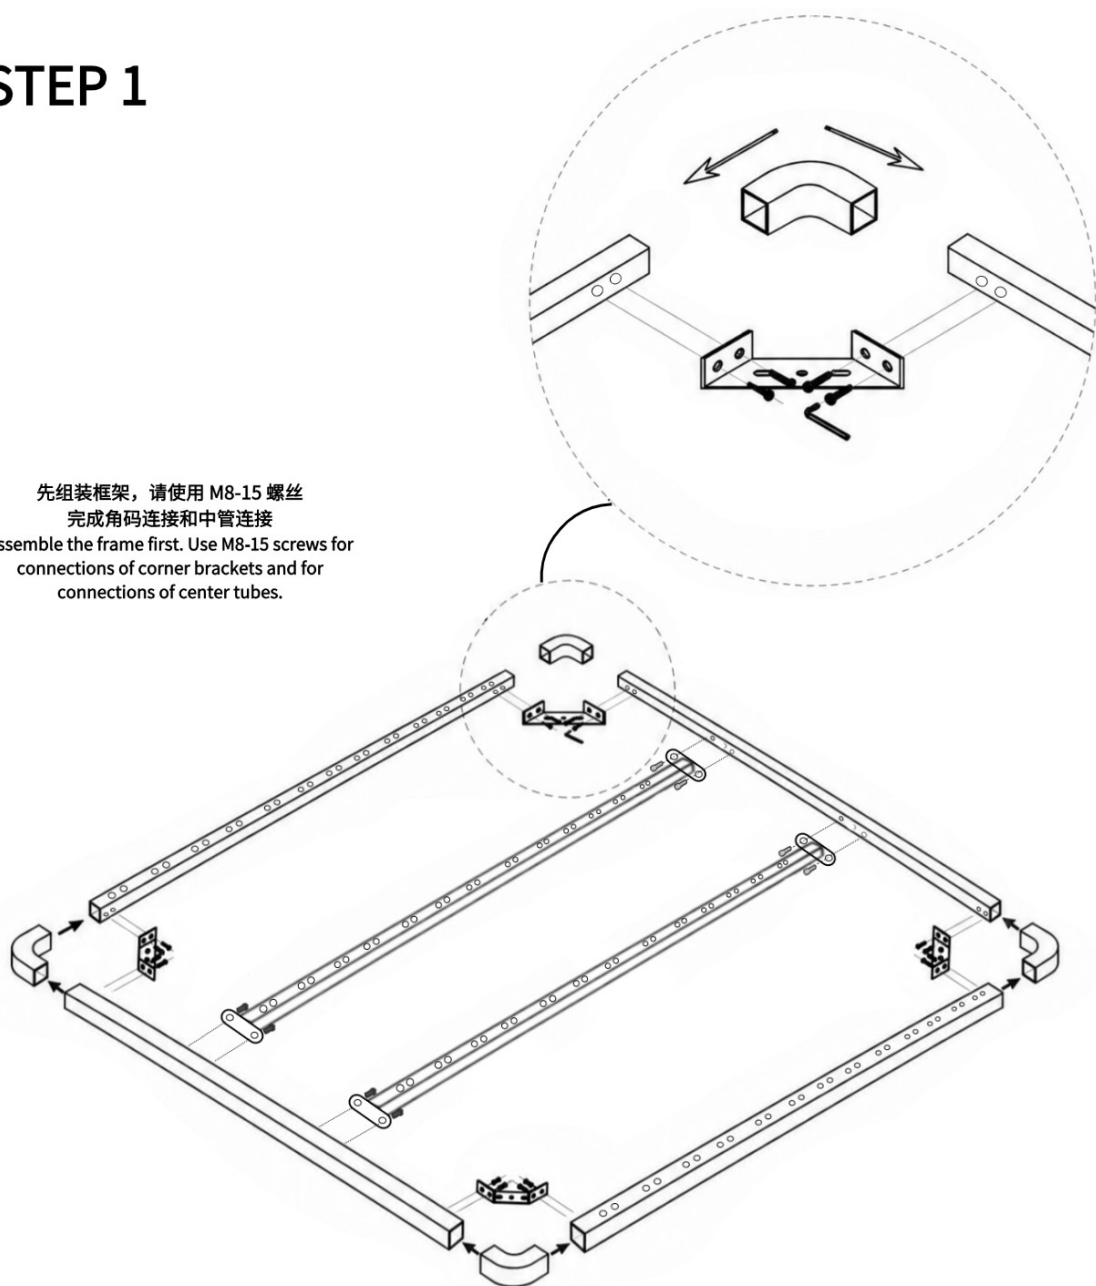


## STEP 2

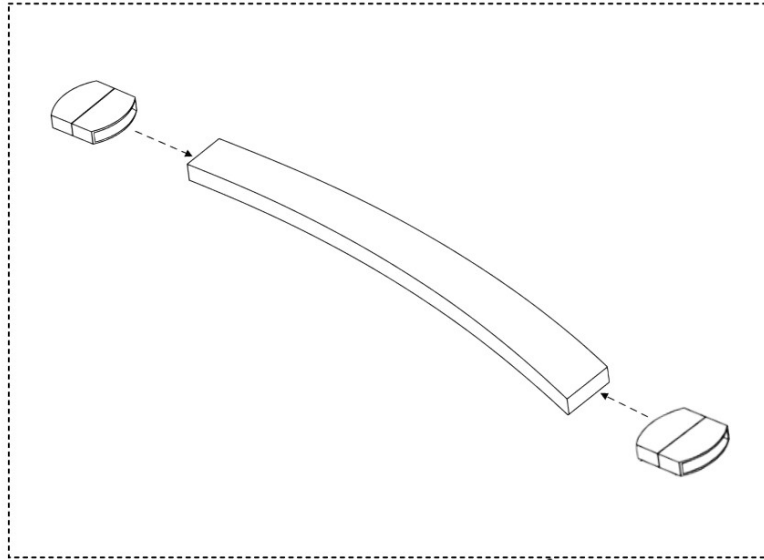

请把胶套扣头对准钢管上的双孔，  
避免因对不准而损坏胶套。  
Please align the locking lugs with the dual holes  
on the steel tube. Misalignment may cause  
damage to the slat cap.

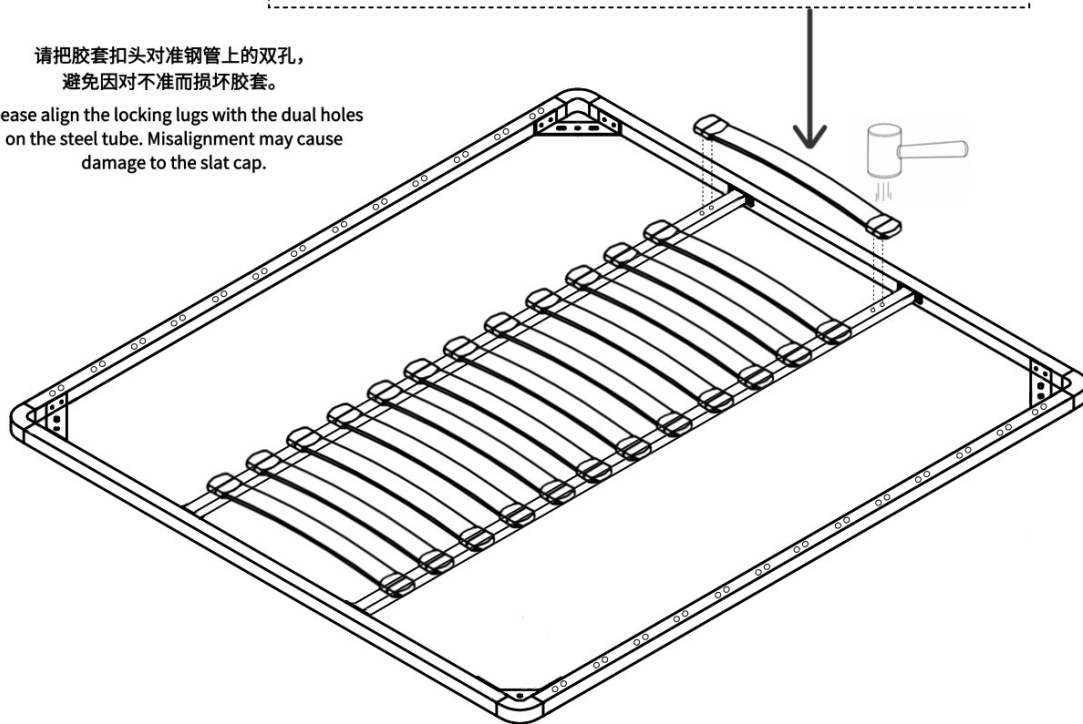


## STEP 3

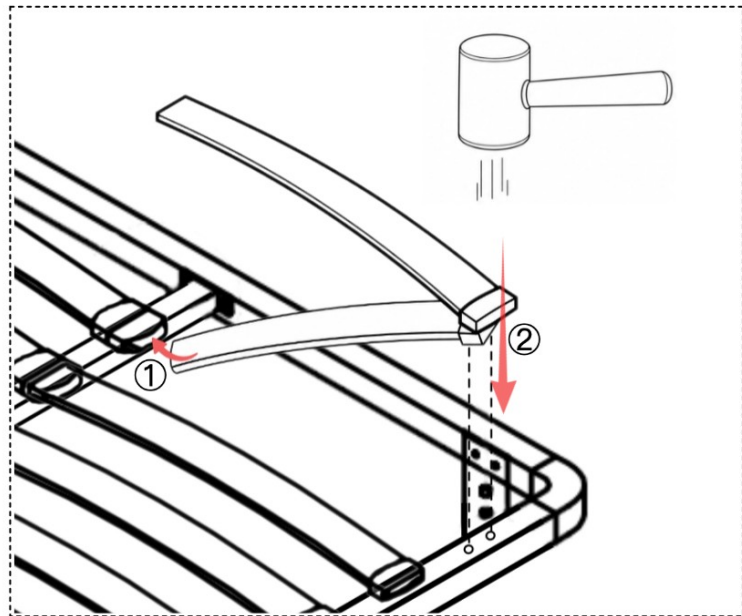


依次把两侧木板先套进中管上的双接胶套上，  
再把另一头单接胶套打进边管对应孔位

Fit the side slats one by one into the double-end  
slat caps on the center beams, then tap the  
single-end slat caps on the other end into the  
matching holes of the side tubes.

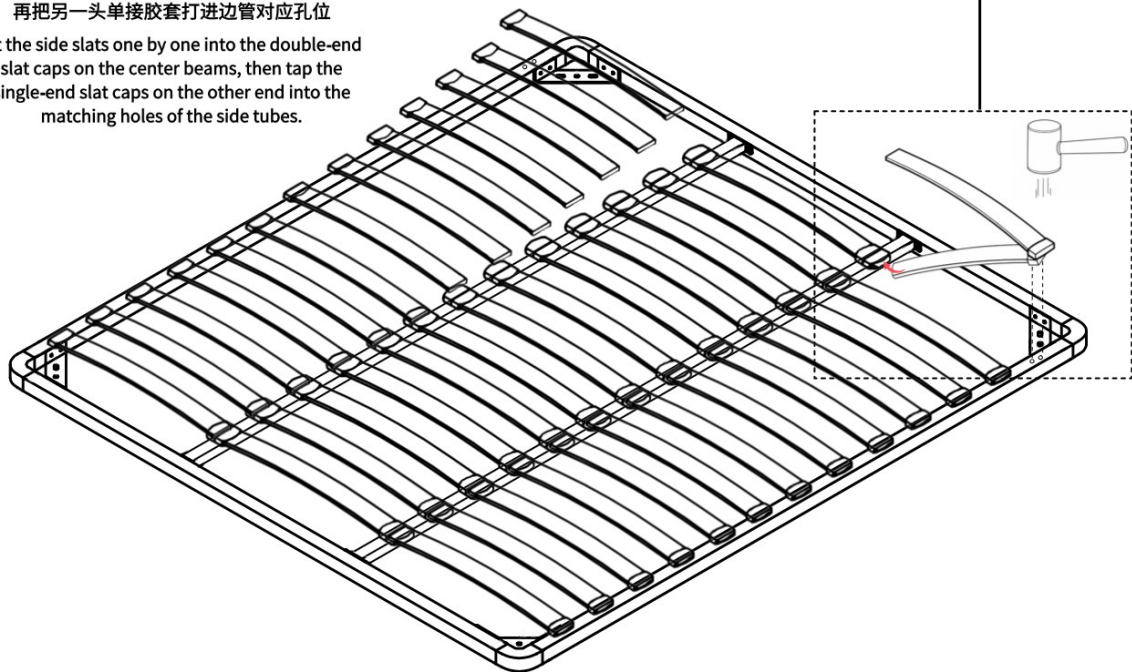

## STEP 4

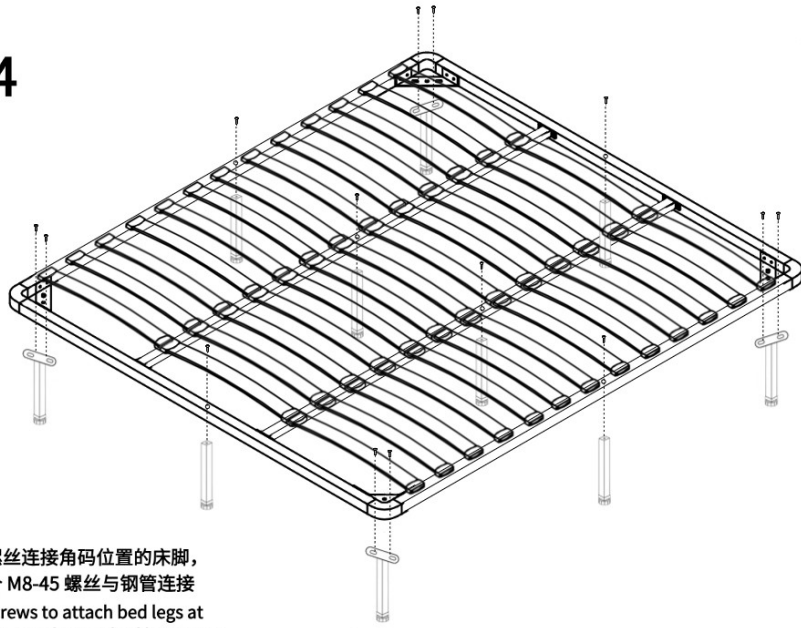

请使用 2 个 M8-15 螺丝连接角码位置的床脚，  
其余床脚请使用 1 个 M8-45 螺丝与钢管连接  
Use 2 pcs of M8-15 screws to attach bed legs at  
corner-bracket positions. For the rest bed legs, use 1  
pc M8-45 screw each to connect with steel tubes.

